


EASYBOOT CLOUD SIZE CHART

Size	Width in inches	Length in inches
00	3 1/2" - 3 7/8"	4 - 4 3/8"
0	3 7/8" - 4 1/4"	4 3/8" - 4 5/8"
1	4 1/4" - 4 7/8"	4 5/8" - 5 1/8"
2	4 7/8" - 5 1/4"	5 1/8" - 5 3/8"
3	5 1/4" - 5 7/8"	5 3/8" - 5 7/8"
4	5 7/8" - 6 1/4"	5 7/8" - 6 1/4"

How to Properly Measure Your Horse's Hoof

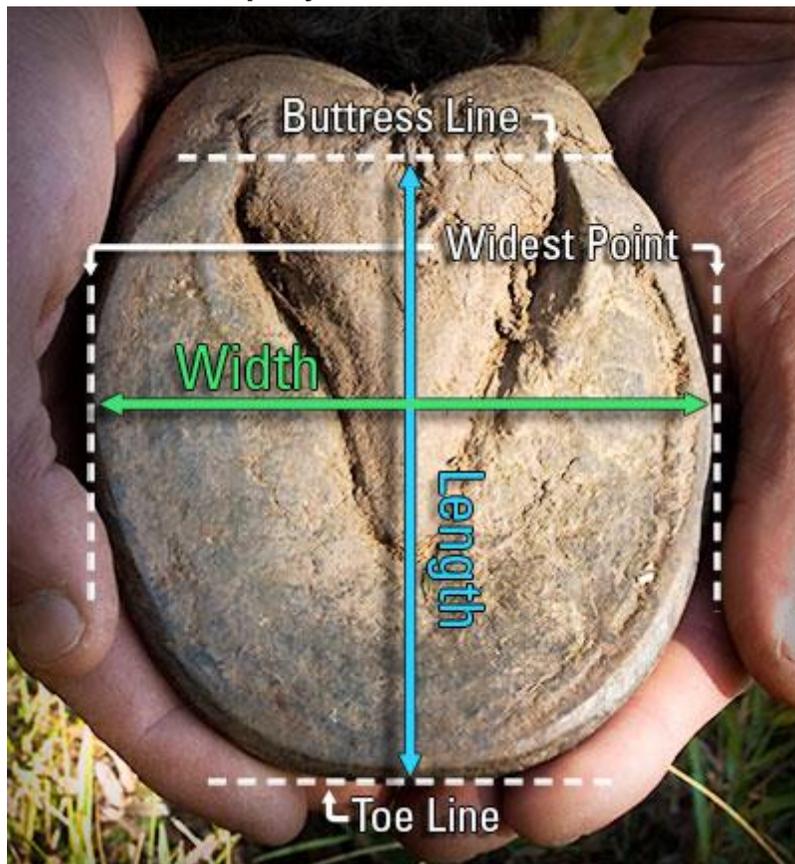

After a fresh trim, measure the width of the hoof across the bottom at the widest point.

Measure the length of the hoof from the toe to the buttress line of the heel. The buttress line is the farthest weight bearing point of the heel where the hoof wall ends. Do not include the heel bulbs in the measurement.

Compare your measurement with the appropriate size chart.

Ideally, the length and width measurement will fit into the same size. If the length and width measurements indicate different sizes, select the larger size. If the width and length measurements are different by more than one size, your selected boot style is not recommended.* Be sure to check your measurements against an alternative boot in the EasyCare line—another style may accommodate your horse's hoof shape